

OMNYA AM 41443

AUTOMIXER PREAMPLIFIER

User's Manual

Rel. 1.01

24/09/2007

SUMMARY

1 FOREWORD

- 1.1 Thanks
- 1.2 The automatic mixer preamplifier
- 1.3 The package contains

2. DESCRIPTION

- 2.1 Block diagram and description
- 2.2 Front panel of AM41443
- 2.3 Rear panel of AM41443

3. THE CIRCUIT

- 3.1 Front panel switch
- 3.2 Microphone channel
- 3.3 Tone controls
- 3.4 Master balanced output
- 3.5 Auxiliary balanced output
- 3.6 USB control port
- 3.7 RS232 control port
- 3.8 Daisy-Chain connectors and RS485 port
- 3.9 Internal selections

4 OPERATING MODES

- 4.1 Manual
- 4.2 Mixer Stand-alone
- 4.3 Mixer Daisy Chained
- 4.4 Programming and controlling
- 4.5 Master and Slave

5 PROGRAMMING

- 5.1 Reset
- 5.2 Indications from the VU-meter
- 5.3 LED for status channel indication
- 5.4 Default settings
- 5.5 Behaviour with the manual selections

6 INSTALLATION

- 6.1 Mechanical installation
- 6.2 Plugging into the mains
- 6.3 Ground loop
- 6.4 Microphone lines

7 USING THE AUTOMIXER

- 7.1 Church setup
- 7.2 Conference room setup
- 7.3 Videoconferencing setup
- 7.4 Broadcast uses

8. TECHNICAL CHARACTERISTICS AND PERFORMANCES

- 8.1 List of the controls available for remote control:
- 8.2 Technical Data

APPENDIX OPERATING FUNCTIONS

- A.1 AMB-THR
- A.2 Last-On
- A.3 One-On
- A.4 LOM
- A.5 NOM
- A.6 ORG
- A.7 NOISE GATE
- A.8 LIMITER

1. FOREWORD

1.1 THANKS

Congratulations! You have chosen an Omnya brand product. The automatic mixer and preamplifier AM41443 is a high technology device engineered to solve numberless problems with an incredibly easy use. We hope you will be completely satisfied with this product's features.

1.2 THE AUTOMATIC MIXER

When installing a P.A. system where loudspeakers and microphones are located in the same room, two contrasting requirements need to be met: an adequate sound level has to be achieved to ensure intelligibility, but feedback must not be triggered.

Problems come up especially when several microphones are used, as the installer has to adjust each of them to the required sensitivity when in use. However, when all the microphones are on, overall sensitivity increases significantly as well, by 3 dB each time the number of microphones doubles. We thus have +3dB when going from one to two microphones, +6dB from two to four, +9dB from four to eight. The sensitivity increase easily moves the system into the feedback-triggering zone and the overall gain has to be reduced to move back into the safe zone. This way however, each individual microphone no longer has its optimum sensitivity. In general, the final setting is a possibly poor compromise, with the significant drawback that, especially in a reverberating environment, any microphone that is open and not engaged picks up and feeds reverberated sound into the system: even when feedback is not triggered, the returning sound tail blurs the direct sound.

AM41443 belongs to a new generation of automatic mixers under the OMNYA brand.

It is a small mixer working both manually and automatically, with a total modularity that avoids real limits to the number of channels. This also means that more AM41443s can be installed locally or in different places and controlled through a PC connection or a remote control panel. It can work as manual or automatic stand-alone or through a USB port controlled mode.

The AM41443 main characteristic is that the audio signal is analog. The high quality microphone front end maintains a very low distortion and a maximum signal/noise ratio. With its 20dB headroom it guarantees a perfect result in any condition. This automatic mixer is produced in a ½ rack unit metallic box.

A powerful microcontroller manages the control functions, the internal functions, the network supervision and the links with the panel or the controlling PC.

The AM41443 has 3 independent balanced outputs. The main output works through a volume control on the front panel. The second output, also having a trimmer volume control, can serve a separate group of amplification devices. The third output can create a chain of several automatic mixers through a RJ45 shielded connection cable containing the audio and the control line data.

An output group can be managed by a tri-band equalizer adjusting the curve. The input channels can be divided into two groups for particular uses such as in broadcast applications with ambience microphones.

This device works with 24V external batteries and can give power supply up to 5 AM41443 with no need of additional power sources.

The firmware updates available on Internet can be easily installed through the USB port.

1.3 THE PACKAGE CONTAINS

Inside the AM41443 box you will find:

1 AM41443

1 50 cm RJ45-RJ45 connection cable

1 24V 300mA power supply

1 short rack-mounting bracket (long bracket for single mount or support for double mount are optional)

2. DESCRIPTION

The automatic mixer preamplifier AM41443 provides all the fundamental functions typical of such device and some more features:

- It opens the engaged microphone channels only, and keeps the others closed (see par. 4.8). In other words, when the signal is generated by the voice of the speaker talking into the microphone, the channel opens and turns on the signal. In any other case, when the signal is due to ambient noise or reverberation, the channel stays closed and the signal is attenuated and not heard.
- It keeps the mixer's output level at its preset value when the number of open microphone channels changes (see NOM App.A.5)

Besides, the following functions are also available:

- **LAST-ON:** last activated microphone remains open even if the speaker is silent until a new microphone is activated
- **LOM:** The number of open microphones can be limited from 1 to 4 for the single device, from 1 to N for linked devices.
- **ONE-ON:** Microphone channel 1 is activated when any other microphone receives a signal
- **PRIO:** one microphone channel has the priority over the other microphones.
- **ORG:** a chosen channel forces the closing of other channels which were qualified for this function
- **OVR:** A channel can be forced open

Other AM41443 features are indicated in sections 8.1-8.2


The logic controlling this device is undoubtedly its fundamental and most important characteristic. The AM41443 is basically a mixer with a VCA on each microphone channel that turns the microphone on and off. Normally off, the gate goes on as soon as someone begins speaking at the relevant microphone. One of the most important problems for an Automixer is the circuit used to turn the channel on or off. To attain this result the incoming voice signal must be compared to a reference or threshold signal. The easiest way is the use of a fixed threshold as in a simple gate (the threshold voltage may actually be adjusted manually but remains fixed during operation). A fixed threshold does not work: if set low, every unwanted sound picked up by the microphone will open the channel, if set too high the first syllable of the speech will be lost.

What is needed is a threshold voltage that automatically follows the ambient noise. Such is the circuit used by the Automixer where the sum of the signals picked up by all microphones connected to it is processed to produce the reference threshold signal that represents the ambient noise. This way what actually turns the channel on is the difference between the direct sound and the background or ambient sound.

The managing of the functions dedicated to an automatic mixer can be various and different. The AM41443 is an analog mixer based on a digital control and even if it has a predefined control mechanism it is open for future implementation of alternative models for the microphone controls.

The AM41443 features 4 variable gain microphone inputs; phantom power is given to all microphones at the same time through a front panel switch.

2.1 BLOCK DIAGRAM AND DESCRIPTION

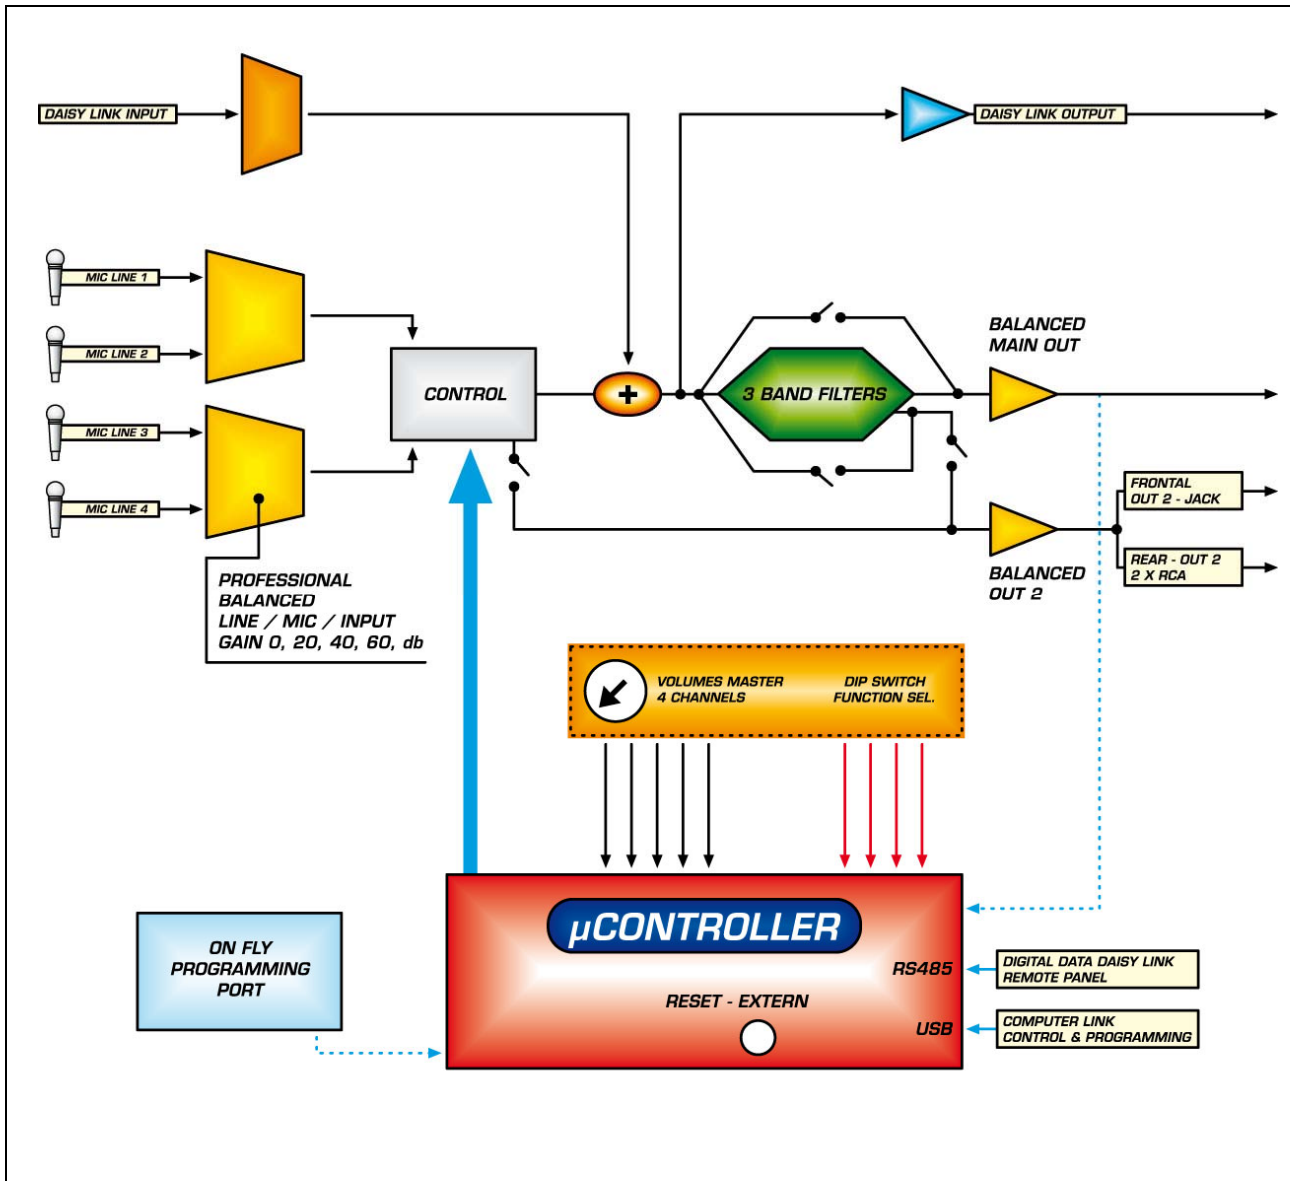


As shown in the picture the AM41443 mixer can be used in very different situations thanks to its particular features. As already said in the description, this automatic mixer is a digital controlled analog device. This means that AM41443 can conceive a very high audio purity and has the advantage to allow both a local and a remote control on the main functions. Also other processes, as the channels opening, can be automated following needs.

The input section has 4 variable sensitivity inputs and processes signals from -60 dB to line level. These inputs can be divided into 2 blocks of 2 channels each to control separately (locally or remotely) the mixing of a number of channels. In this manner, for example, we can mix on the auxiliary output all 4 channels while we send only two of them to the general mixing. This function could be useful in situations in which a service need ambience signals for a radio broadcast while the preserved signals (without the ambience) are sent to the local reinforcement system.

A tone correction feature can be used before the master or the auxiliary output. The daisy chain connection of more AM41443 (up to 24 devices can be linked) is obtained through a RJ45 connector. This connection allows the link between the units of the digital line for the control-information on the chain and the analog signals producing the mixed program. The audio signals are directional.

2.2 AM41443 FRONT PANEL

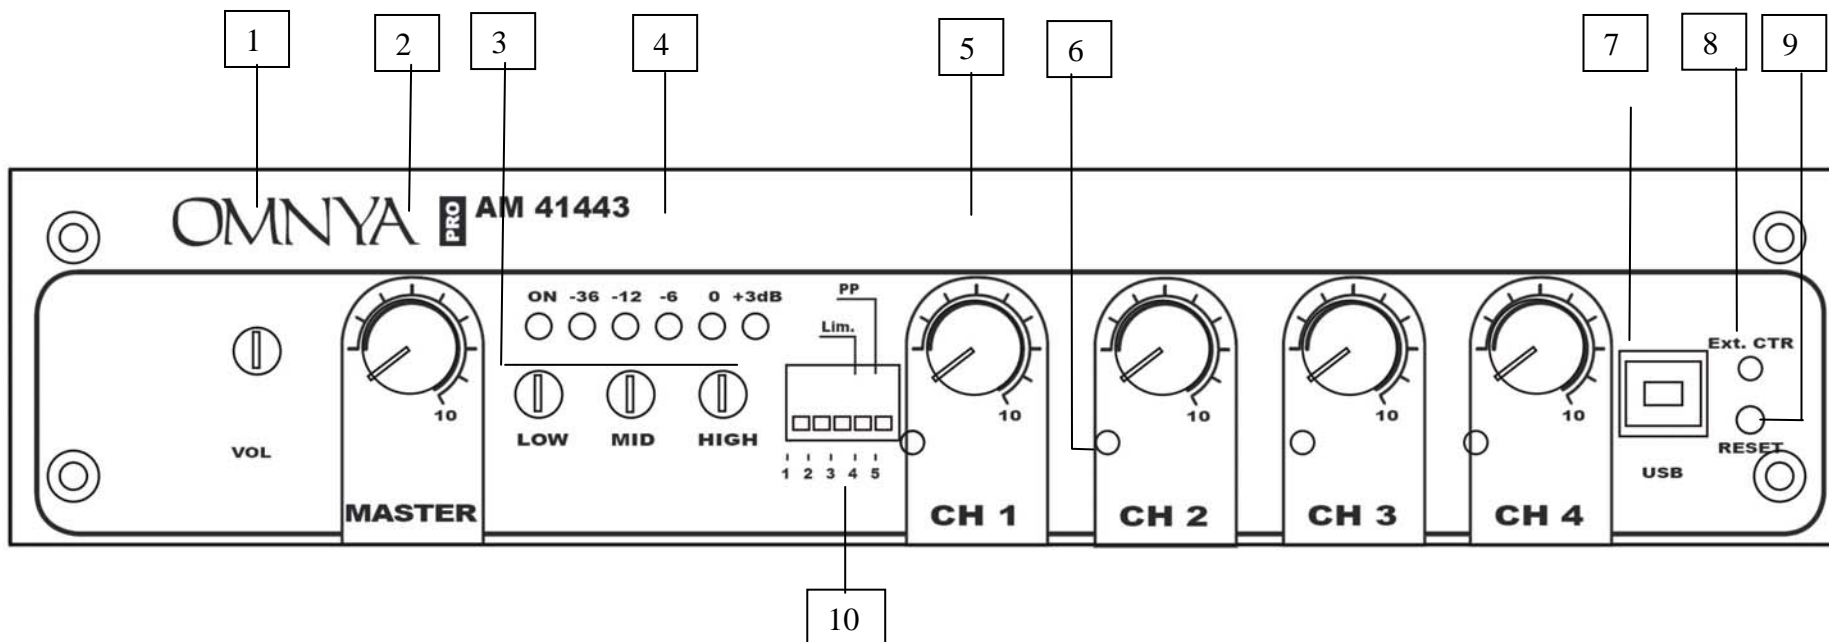


- 1) AUX2 Auxiliary volume output
- 4) VU meter and configuration signal
- 7) USB connection for remote PC control
- 10) Mode and function selection switch

- 2) Master volume
- 5) Microphone input level 1-4
- 8) External control LED

- 3) Low-medium-high tone control
- 6) ON LED
- 9) Reset button

2.3 AM41443 REAR PANEL

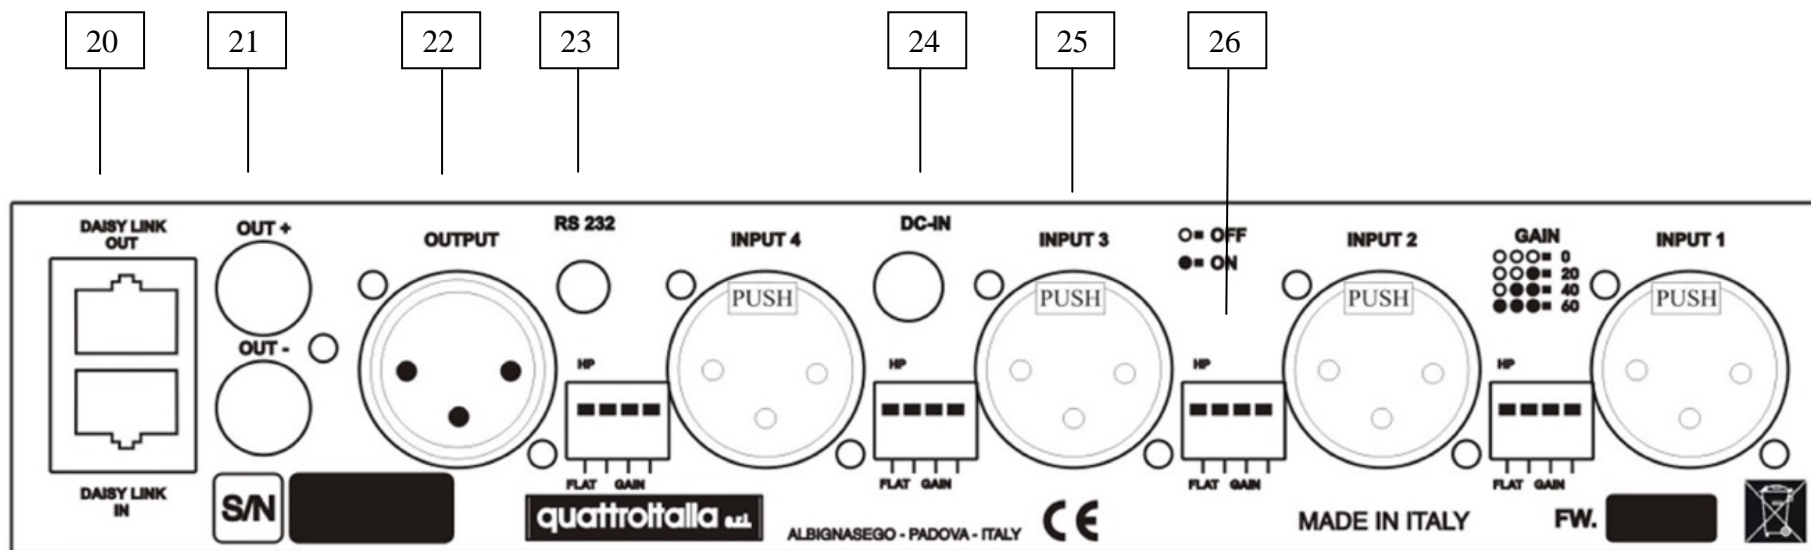

20) DAISY CHAIN connector
 23) RS232 port
 26) Sensitivity/filter switch

21) RCA auxiliary output
 24) DC power supply

22) Master output
 25) MICRO-LINE inputs


3. THE CIRCUIT

AM41443 is a complete automixer-preamplifier that can drive one or more power amplifiers. Main features:

- 4 variable sensitivity microphone inputs with 48V phantom power and selectable high pass filter (see 3.1-3.2)
- General tone control (see 3.3)
- Balanced master output on XLRm connector (see 3.4)
- Balanced auxiliary output on RCA connectors (see 3.5)
- USB control port (see 3.6).
- RS232 serial control port (see 3.7).
- Connector used to link other mixing units through a daisy chain connection (see 3.8).

3.1 FRONT PANEL SELECTION SWITCH

In the default configuration of the device all the switches are lowered. In this condition it works as an automatic mixer. To be more detailed:

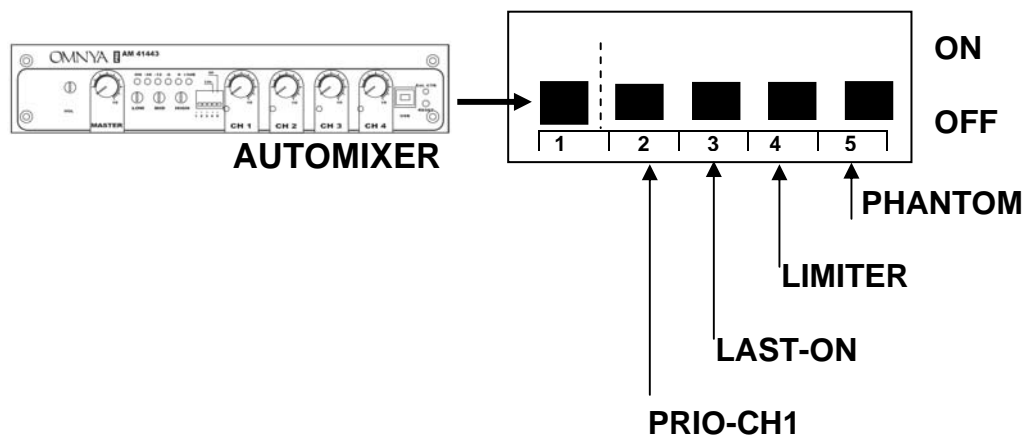

The first lowered switch shows that the device is operative in the automatic mode, while all the other functions are deactivated. These functions can be activated putting switches no. 2-3-4-5 in the ON position.


For example:

to activate LAST-ON push switch no. 3 upward.

to activate phantom power on all microphones put switch no. 5 in the ON position.

The first switch in the ON position shows that the device is in the manual mode, i.e. mixing every signal without on-board intelligence (as a concert mixer). The other functions (Noise-Gate, *Future Use*, Limiter, and Phantom) can be activated pushing the switches upward

N.B. The first switch position changes the meaning of 2nd and 3rd switch.

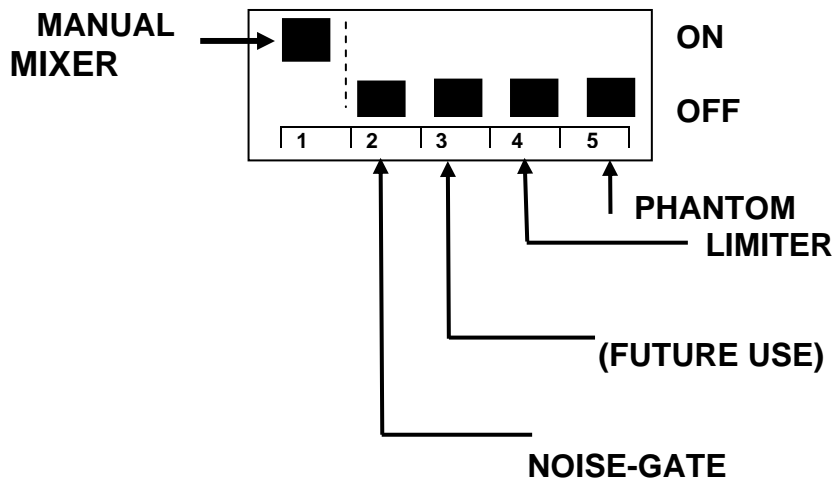

P.S. The AM41443 can be controlled through an external serial connection (see software user's manual for the control of AM41443). It is important to remember that the settings activated from the front panel prevail on the ones given from an external control.


3.2 MICROPHONE CHANNEL

It includes the balanced input low noise preamplifier with selectable sensitivity control and high-pass filter.


The microphone input features a XLR-3F connector codified as follows:

PIN 1 = MAINS / PIN 2 = + (hot) / PIN 3 = - (cold)


Next to the XLR connector there is a 4-position DIP-Switch [26, par.2.4]. The three sections on the right control the gain following the scheme in the picture.

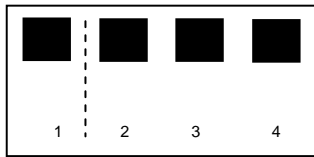


0dB

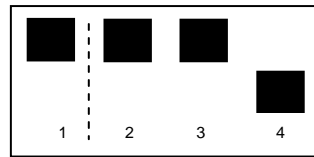

20dB

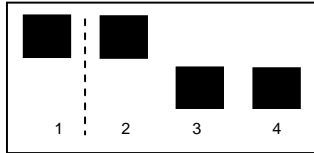

40dB

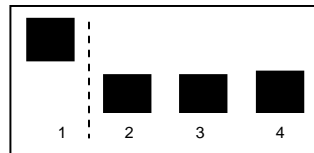


60dB


The gains increase lowering the switches from right to left as shown here above and on the device rear panel.

HIGH PASS FILTER

HIGH PASS FILTER ON 100HZ

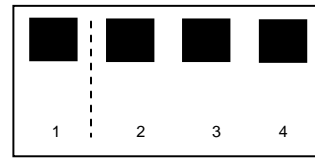

FLAT
(flat up to 10 Hz)

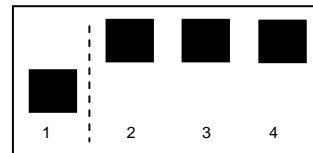

The first section on the left is for the activation of the high pass filter. This filter is activated as in the above scheme:

The installer must necessarily know the exact sensitivity of the installed microphones in order to assign the correct gain to each input.

The green LED (par.2.3) placed on the front panel under every volume control lights up when a channel is activated. When the light goes out the channel is being deactivated. In case of short pauses the led stays on, due to the HOLD circuit.


When this LED lights up in RED colour it indicates the channel is saturated. If the LIMITER function is activated, this LED indicates that the limiting function is active on the signal to avoid the saturation.

3.3 TONE CONTROLS

Normally deactivated (default). Internal setting (see sect. 3.9)

Some tone controls on the front panels are reachable by means of a screwdriver. These filters have been put to limit actions on the low, medium and high spectrum components in order to obtain a general adjustment of the output signal.

The minimum and maximum output signal excursion through these controls is shown in the picture below:

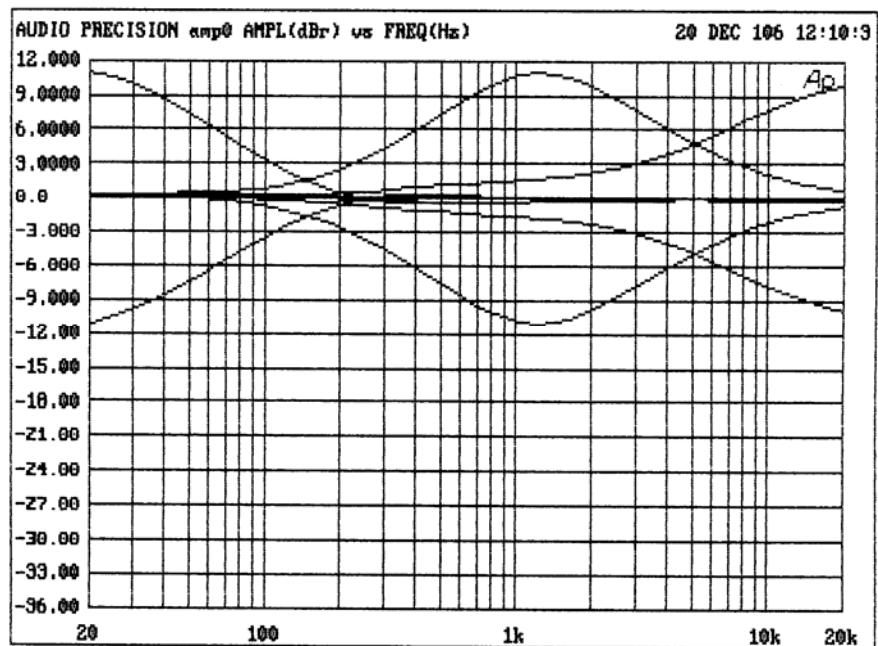

Maximum emphasis and attenuations: ± 10 dB

- LOW-PASS: 20Hz
- MID_BAND: 1250Hz
- HIGHT-PASS: 20kHz

Tone controls can be active on the Master main output or on the auxiliary output separately, or on both depending on the position of the selectors inside the device (see section 3.9)

3.4 MASTER BALANCED OUTPUT

This output is electronically balanced. It is necessary to remember that when the Vumeter shows 0dB the balanced output level is 12dBu. When connecting an unbalanced input device to an output only the output between pin 2 and pin 1 can be used, leaving pin 3 disconnected. This unbalanced signal level has a 6dBu level. The XLR-3M output connector links [22, par.2.4] are:

PIN 1 = mains / PIN 2 = + (hot) / PIN 3 = - (cold)

3.5 AUXILIARY BALANCED OUTPUT

A second balanced output is available through the double RCA connector [21, par.2.4], working with an auxiliary control level on the front panel [1, par.2.3]. This auxiliary output is nevertheless controlled by the Master volume control [2, par.2.3] but the level control [1, par.2.3] allows superimposing a ± 16 dB.

On the upper RCA connector there is an in-phase signal, on the lower RCA connector the anti-phase signal. These two signals form a balanced signal connectable with an XLR connector. This additional output is useful to set a different route of the input signals; it gives also the possibility to exploit the split-channels and tone control functions to reinforce different areas of the sound system, or for different uses such as radio or television broadcasts with the use of ambience technique.

3.6 USB CONTROL PORT

The connector placed on the right side of the front panel [7, par.2.3] is for USB connections with a personal computer. The control software is provided with the AM41443. Updates are available for download at the website:

www.omnyamix.com/download.htm

The parameters on the single AM41443 connected to form a system can be completely controlled through the USB-B connection.

In a configuration made with more than one AM41443 linked together, the USB port works exclusively on the Master unit.

3.7 RS232 CONTROL PORT

The automatic mixer AM41443 has a serial port RS232 for the connection with a standard control system device [2.4-23]. The connection is made via a 3,5mm stereo jack connected as follow:

Tip:	Tx
Ring:	Rx
Body:	Ground

In a configuration made with more than one AM41443 linked together, the RS232USB port works exclusively on the Master unit.

3.8 DAISY-CHAIN CONNECTORS AND RS485 COOMUNICATION PORT

The AM41443 can be connected in a chain to obtain complex configurations. For this reason on the back panel there is a double connector of the RJ45 type [20, par.2.4]. These connectors provide the following signals:

- Digital line (RS485) for the communication between different devices.
- Balanced analog line with the sum of all the channels and mixers connected upward.
- On the OUT connector a balanced line signal is available; on the IN connector there is a real line balanced input that can be used for the input of a 0 dB signal in the system (see table below).
- The power supply is sufficient for up to 3 additional AM41443 units. The connection is directional; for this reason there is an Input and an Output connector. The pins configuration is as indicated:

PIN	INput Connector	OUTput Connector
1	DATA+	DATA+
2	DATA-	DATA-
3	D_GND	D_GND Not connected (Internal option for connecting)
4	24V_LINK	24V_LINK
5	GND_LINK	GND_LINK
6	AUDIO/IN+	AUDIO/OUT+
7	AUDIO/IN-	AUDIO/IOUT-
8	AUDIO_SHIELD (ground audio shield)	AUDIO_SHIELD (ground audio shield, preferably to be unconnected with a custom cable in the case of long lines)

IMPORTANT: The daisy-chain connection is directional in fact the double RJ45 [20, par.2.4] has one section qualified as IN (lower connector) and one section qualified as OUT (upper connector).

For the appropriate audio signal connection a cable has to be connected from the OUT to the IN of the next device.

It is possible to define as first device of the chain the one with no connection cables on the IN connector.

It is possible to define as last device of the chain the one with the free OUT connector.

There are no limitations on the position of the Master device in respect to the slaves. Nevertheless if we want the Master unit to have the sum of all the channels it must be connected as the last device of the chain.

NB. With the use of the RJ45 outputs the AM41443 provides the output of partial mixed signals along the line. For example:

The 1st device has the mixed channels on the local outputs

The 2nd device has the sum of its channels plus those of the previous device, etc. on the local outputs

The last device (generally the Master unit) has the mixing of all the channels of the chain.

Taking into account that all the devices have a local auxiliary volume control, semi independent from the Master, it is possible to have partial outputs for specific needs.

Creative use: it is possible to use the digital control on all the chain of devices creating different mixing blocks. It is possible to break the audio chain using a formally wrong connection of the daisy chain cable. In fact, connecting one OUT to one OUT or one IN to one IN the digital communication is maintained but the audio signal stops at the desired level giving access to single devices or different mixing groups. The Master level will act on all the groups.


3.9 INTERNAL SELECTIONS

Inside the AM41443 there is a series of selections. The picture here below indicates the position of the selectors associated with the functions:

- **SPLIT** Channel splitting
- **GAIN** Gain
- **FILTER** Filters bypass

Each function has two selectors (A, B) allowing different combinations.

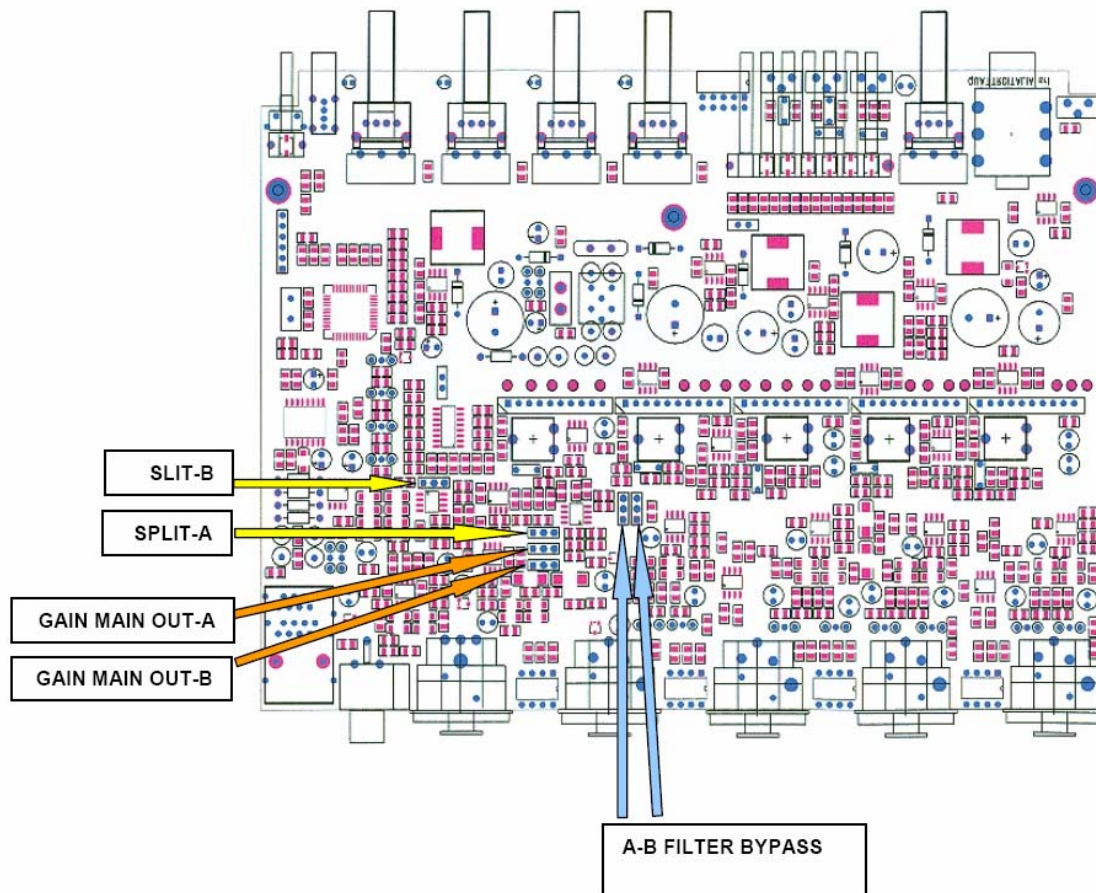

The selection of the sections must be operated according to the tables here reported that provide the indicated results.



SPLIT – This function permits the separation of the four inputs into 2 groups. One group will be addressed to the Master output [22, par.2.4]; the other will go to the 2° auxiliary output [21, par.2.4]. Based on the position of the SPLIT selectors, jointly with the FILTER BYPASS selectors, these two groups provide various configuration; i.e. (1-2) // (3-4), or (1-2-3-4) //(1-2) etc. Here below we exemplify various situations.



MONO MODE configuration (default).

The device is release by the Manufacturer in this configuration.

	Position of the selectors
Inputs 1-2-3-4 are addressed to the OUT2	A 
Inputs 1-2-3-4 are addressed to the MASTER output	B 

This configuration is independent from the position of the filters selectors.

SPLIT MODE configuration





	Position of the selectors
Inputs 1-2-3-4 are addressed to OUT2	A 
Only the Inputs 1-2 are addressed to the MASTER output	B 

With the interaction of the *SPLIT MODE* and *FILTER* selectors is possible to obtain different routing patterns as for example a stereo separation:

Inputs 1-2 to the MASTER output
Inputs 3-4 to the AUX output









These variations will be the subject of an application note separated from this manual.

GAIN - Gain for the Master Output. With the indicated selectors it is possible to modify the level of the Master output [22, par.2.4]. There are 2 levels as indicated in the table.

<p>A </p> <p>B </p>	<p>Gain: +12dB. Default selection</p>
<p>A </p> <p>B </p>	<p>Gain: +6dB.</p>

Note: the A and B selectors must be in the same position.

FILTER - These selectors enable the insertion of a three-band filter on the desired outputs. It is possible to select among the following configurations:

<p>A </p> <p>B </p>	<p>DEFAULT MASTER [22, par.2.4] and OUT2 [21, par.2.4] outputs are in Flat. This is the default configuration released by the manufacturer.</p>
<p>A </p> <p>B </p>	<p>MASTER and OUT2 outputs are served by the tone control.</p>
<p>A </p> <p>B </p>	<p>MASTER output is in Flat OUT2 output is served by the tone control.</p>
<p>A </p> <p>B </p>	<p>OUT2 output is in Flat MASTER is served by the tone control.</p>

With the interaction of FILTER and SPLIT selectors different configurations for the Input signals are possible.

These variants are the subject of an APPLICATIVE NOTE separated from this manual.

4 OPERATIVE MODALITIES

The AM41443 automatic mixer was born to be a fully autonomous and ready to use device with the default parameters (factory default).

Changing the position of the 1° switch of the frontal dip-switch [10, par.2.3] it is immediately possible to decide if the device will act as an automatic mixer or as a manual mixer. For the other presets see chapter 3.

An AM41443 has 4 input channels; for the use of a greater number of channels more devices can be connected in a chain. These devices can be programmed or controlled via an external connection to a PC or to a remote panel. The connection can be made through a proprietary link with the RS485 or USB ports or with a Crestron, AMX protocol with a RS232 port.

We schematically report the different functional modalities:

DEVICE	CONFIGURATION		
STAND ALONE (SINGLE)	MANUAL	Programmable	Via Computer
		Controllable	Via Computer
			Via Remote Panel
	AUTOMATIC	Programmable	Via Computer
		Controllable	Via Computer
			Via Remote Panel

DEVICE	CONFIGURATION		
IN CHAIN	MANUAL	Programmable (if Master)	Via Computer
		Controllable (if Master)	Via Computer
			Via Remote Panel
	AUTOMATIC	Programmable (if Master)	Via Computer
		Controllable (if Master)	Via Computer
			Via Remote Panel

4.1 MANUAL

The AM41443 can be installed and used as a simple analog manual mixer. The selection made on the first section of the dipswitch on the front panel [10, par.2.3] conditions the functional modality. The manual modality (selector on the high position) allows the control of the various channels and the master as in a normal mixer. All the microphones are open at the same time because some of the logic functions are not active. For the other selections see cpt .3.1. A manual mixer can be controlled remotely.

4.2 MIXER STAND ALONE

The AM41443 can be installed and used as an automatic mixer fully working on the base of the factory default parameters. This modality is activated through the selection made on the first section of the dipswitch on the front panel [10, par.2.3]; this selector is on the low position (default).

The volume control is made with the potentiometers on the frontal panel, the logic takes care of the automatic activation of the microphones relevant for the correct mixing of the signals. Some variations of the default parameters are available on board (cfr. cpt.3.1).

4.3 DAISY-CHAINED MIXER

The functional modality as a mixer can be extended to other units that can be connected through the daisy chain port [20, par.2.4]. A series of mixers (up to 24 units) can be connected in order to create a large virtual mixer [see par.3.8]. In this logic we must consider that it is necessary to assign the chain control to one of the units (Master). This device will lead the chain while the others (slaves) will be logically connected to the first one.

For the activation and connection procedure of the devices please see chapter 5.

In this modality the mixers can be controlled through the frontal potentiometers for the various input channels. The general volume (master volume) will be exclusively controlled by the potentiometer of the Master unit. The output levels on the single units are disabled.

In this configuration it is possible to mix automatic and manual mixers to build a flexible system.

The local controls activated with the front panel are working on the local device.

4.4 CONTROL AND PROGRAMMING

The AM41443 can be installed and operated under an external control. The external control can be used to make an accurate setting of the system and control it in a remote modality. These modality can be of three types:

- External control in a tuning session made through the USB port. It is useful to control each parameter of the system using the software provided with the AM41443 (cfr Software manual for AM41443). This operative mode is indicated for the accurate control of all the variables contributing to the system functions.
The external control is operative both with a single mixer (*Master*) and with a system constituted by more automatic units and manual mixers as well. The connection is always made to the USB of the *Master*.
- External control through the RS232 for Crestron, AMX and similar controls. This modality is typically indicated for the integration in applications with automation systems.

- Continuous external proprietary control, realized through a controller connected to the RS485 port with the daisy chain connector. This modality can be used in case of an external control of the system with a large data stream to be controlled. The external control is possible connecting to the Master.

4.5 MASTER AND SLAVES

In a system consisting of more than one mixing unit we must consider the concept of Master and Slave. One of the devices must take the control to coordinate the operations. This device is commonly defined Master: it receives commands from the external world and processes the information to be sent to the other devices of the system. The Slave, on the contrary, is the device that, connected in the chain, contributes with its information to the decisions carried out by the Master and applies the commands of its competence.

This hierarchy requires each device to be assigned an ID number. To simplify the procedure of creating the chain, the AM41443 has a function providing the easy assignment of the IDs to the various devices.

Normally, in a data network, each device must be precisely identified. In the case of a chain made with a series of AM41443 the ID is automatically assigned with an increased speed and easiness creating the network.

The operation that must be performed is preparing the devices for the auto-configuration. For this operation we invite you to read the next section of this manual.

One more note on the behaviour of the device while in Slave mode when switched ON in the absence of a Master. In this case the Slave device, after hearing the chain for about 10 seconds, is not finding a Master, it temporarily change to Master stand alone; this status is for permitting the local functionality to a single system.

5 PROGRAMMING

An important operation to be made when connecting more AM41443 units in the chain is to define the role of the single units. In a system there can be only one Master, able to coordinate up to 23 additional Slave units.

Preparing the Master and Slave units we must focus our attention on a small switch placed in a hidden position on the right side of the front panel [9, par.2.3]; it can be reached through the small hole in the panel. It is called reset switch.

5.1 RESET


The reset switch activates some features according to the way it is pressed. There are basically 3 modes:

Activation time	Behavior
< 1,5s	The device quits the external mode. It gives the control back to the local volumes (potentiometers on the front panel) [5, par.2.3]).
> 1,5s e < 10s	<p>Master in the chain:</p> <ul style="list-style-type: none"> ● Loads default values on the single device ● Erases the table of the slaves ● Enters the transition mode (no master no slave) ● If in the chain a Master already exists, the device under reset, after a few seconds, becomes a Slave and receives the ID sequential number from the Master. <p>Master alone:</p> <ul style="list-style-type: none"> ● Loads default values ● Erases the table of the slaves ● Enters the transition mode (no master no slave). After some seconds, not being in a chain elects him to Master status. <p>Slave in the chain:</p> <ul style="list-style-type: none"> ● Loses the ID ● If in external mode it maintains the status. <p>Slave alone:</p> <ul style="list-style-type: none"> ● Loads default ● Enters the transition mode (no master no slave) ● Loses the external status (if present) <p>After about 10 seconds not being connected to a chain it elects itself as a Master.</p>
Pressing the reset switch longer then 10s, >10s	It resets the device and activates the bootloader status. This procedure allows to clean the device of all the changes, loading the factory configurations. Moreover it is ready to accept a new firmware through the USB port (firmware update). (Once the red LED is stable, maintain pressed the switch for 2 more seconds)

IMPORTANT: The reset switch is operative only in association with a further condition illustrated in the yellow document associated to the manual. This procedure is used as a minimal protection against accidental operations.

5.2 INDICATIONS FROM THE VU-METER

 The default indications of the LEDs forming the VU-Meter are






The indicated values are absolute values referred to the master output. If using an unbalanced output a 6dB reduction must be considered.

The levels in the picture are default values and can be reassigned as desired through a software.

When the AM41443 is switched ON the VU-Meter indicates a series of operations the device is performing. Therefore, the blue LED on the far left indicates that the device has been switched on, while the others indicate if the unit is defined as a Slave or a Master or which is the phase in which it is toggling.

In the previous chapter there was a reference to a transition status. Here below are depicted the different indications associated with the status.

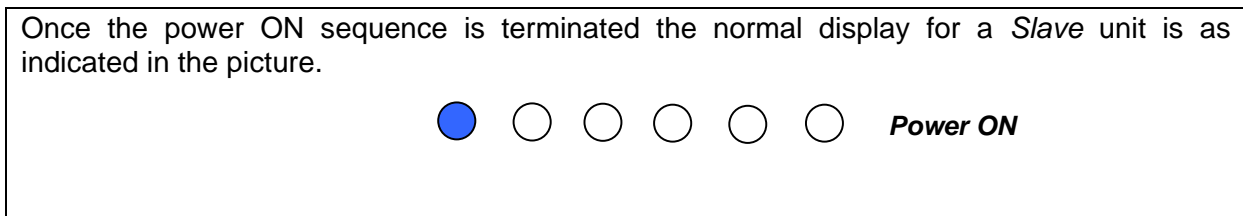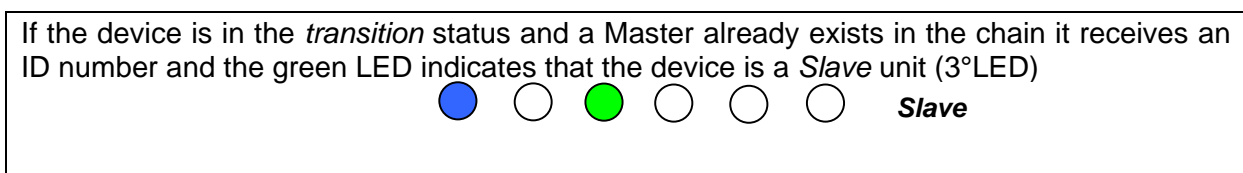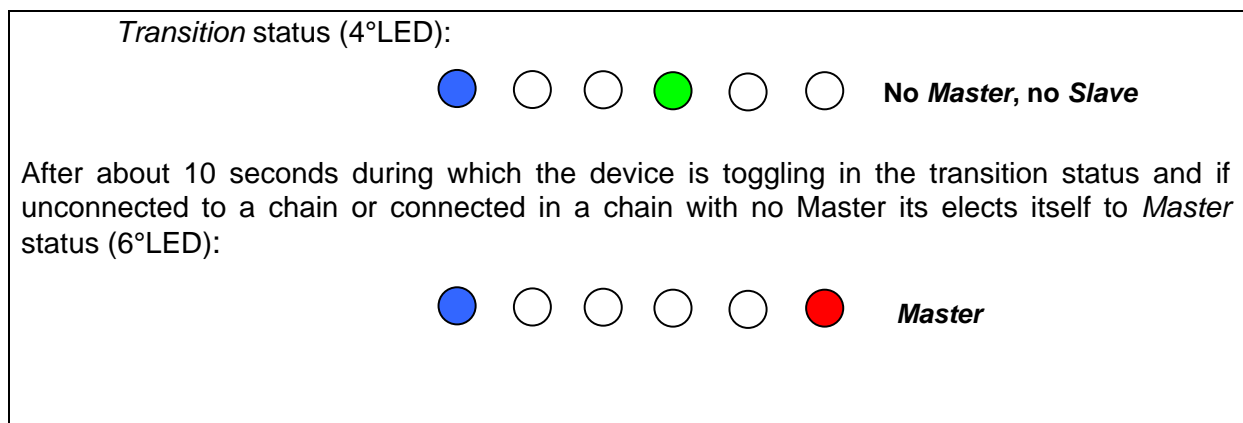

5.3 LED FOR STATUS CHANNEL INDICATION

In the 3.2 section we mention the role of the bicolor LEDs of the channels [6, par.2.3]. These indicators have a multiple role and depending on the setting and programming.

The LED has 2 colors: Green/Red.

The Green color indicates that the channel is activated (open).

If the mixer is in Manual mode this LED is always on.

In presence of a channel saturation it changes its color to Red

If the LIMITER function is activated the Red lighting indicates that the attenuation against the saturation is ON.

Short Red flashes every 10 seconds indicate which are the channels blocked by the external control.

5.4 THE DEFAULT SETTINGS

In the following table are reported the settings and values of the parameters used as factory defaults. It is possible to recall these settings and consequently the proper functionality of the device through the action on the reset switch or on the external control. All these values are based on the needs of the average installations.

STATUS COMMAND	DESCRIPTION	VALUE (possible interval)
THR_OFFSET	Threshold for the channels activation. It is an arbitrary quantity added to the adaptive level. Controlled from PC.	40 (0 --- 100)
ATTENUATION	Level assigned for the attenuation of the channels when killed by the ORGAN function. Controlled from PC	18dB (0 --- 85 dB)
HOLD TIME	Residual time in which a channel under the threshold is still maintained. Controlled from PC.	1500 msec (0 --- 5000msec)
MUTE OFF	Level of attenuation when the MUTE is activated The function is deactivated as default. Controlled from PC and remote panel	40dB (0 --- 100 dB)
NOMA ON	It defines the attenuation level for each doubling of the channels active. This function is activated on all the 4 channels. It is deactivated from PC.	1,7 dB (0 - 40 dB, step 0.3 dB)
LIMITER_THR OFF	It defines the level at which the Limiter acts. This function is deactivated as default. It is activated by frontal Dip-switch on the device and controlled from PC.	0 dBu (+24 --- -24 dB) BALANCED OUT
NOISE GATE_THR OFF	It defines the level at which the channel is silenced. This function is deactivated as default. It is activated by frontal Dip-switch on the device when in MANUAL and controlled from PC.	36 (0 --- 100)
ORGAN DETECT	It defines the channel operating as killer when above the threshold. It defines also the threshold level and the attenuation operated on the selected channels. This function is deactivated as default on all the channels. Controlled from PC.	THRESHOLD: 60 ATTENUAT.: 20Db
VU-METER ON	It defines the activation level for any single LED of the VU- meter. It activates the VU-meters. This function is activated as default. Controlled from PC.	-36dBu; -12dBu; - 6dBu; 0dBu; 3dBu referred to BALANCED OUT
	All other functions are de-activated	

5.5 MANUAL SELECTIONS BEHAVIOUR IN A CHAIN OF DEVICES

The selector on the front panel of AM41443 activates a number of functions independently from the system configuration. Indeed, these adjustments have priority on those made through software.

The aim of this paragraph is to show the behaviour of the devices when different functions are activated and their relationship within a chain connection.

To evaluate this behaviour we must first define the term convention; the mixing of an audio signal moves toward the Master, while the control signals move in the opposite direction. To better understand this statement see att. no. 1.

- 1° switch (left): **Automixer/Manual**

This option is present and selectable both on the Master and on the slaves. The use of the *Manual* option on the Master is not recommended.

The meaning of the following switches depends on the 1° switch *Automixer/Manual*

- 2° switch **Automixer mode** - PRIO-CH1-

Active on Master.

Deactivated on Slaves.

When we receive a signal on channel 1, the other channels are attenuated (both on the Master and Slave units). The attenuation is equal to the *Automixer under threshold* (default 18 dB).

On the channels attenuated by channel 1 priority, the green leds stay on in case a signal is passing; that is, while the green leds are turned off to show a channel is closing in an *Automixer under threshold* situation, they stay on in case of a signal in a PRIO-CH1 situation. This control does not work on the devices configured as *manual*.

- 2° switch in **Manual mode** – NOISE GATE -

Active on Master.

Active on Slaves.

If in **Manual mode**, when the channel goes under threshold and closes, the channel green led do not turn off. This means that in manual mode the green leds are always on.

- 3° switch **Automixer mode** - LAST-ON -

Active on Master.

Deactivated on Slaves.

The LAST-ON involves the whole chain.

- 3° switch in **Manual mode** - Future Use -

Active on Master.

Deactivated on Slaves.

- 4° switch **Automixer mode** - LIMITER -

Active on Master.

Active on Slaves.

- 4° switch in **Manual mode** – LIMITER -

Active on Master.

Active on Slaves.

LIMITER behaviour when active on the MASTER unit in *Automixer* mode

When the Limiter is acting, the volumes of the 4 channels in the Master unit decrease, like all the channels of all the devices downstream.

The Limiter intervention follows the level of the general mixed signal on the Master main output; this signal is made up of the 4 on board channels signals and of all the channels downstream. The Master main output is called *Master Out*.

LIMITER behaviour when active on the MASTER unit in *Manual* mode Comportamento Option not recommended

LIMITER behaviour when active on a Slave unit in *Automixer* or *Manual* mode

When the Limiter is acting, the volumes of the 4 local channels in the Slave unit decrease. The action does not spread, either to the devices upstream or to the ones downstream. The local Limiter intervention follows the mixed signal on its main output, being thus influenced by the signals coming from all the slave units downstream. In short: the Limiter intervention is caused by the mixed signal of the 4 local channels and of all channels downstream, but the volume limitation acts only on the 4 local channels.

6 INSTALLATION

The AM41443 is a high quality automatic mixer giving excellent results. To obtain the best performance it has to work in a system consisting of high level devices. While an operating automixer doesn't menace the good quality of the audio signal, it cannot solve the audio problems arising from the devices working before or after it. The global quality of an audio chain is indeed determined by its worse component.

6.1 MECHANICAL INSTALLATION

The AM41443 can be either mounted on a 19" rack with a set of 2 brackets and 4 screws or put on a horizontal surface.

Like all the devices studied for the signals processing, it is advisable to install the AM41443 far from hot sources (as for example power units) and from devices generating magnetic fields or radiocontrolled, which may cause instability of the logic functions.

6.2 ELECTRICAL CONNECTION

The AM41443 is fed through a 24VDC / 5W nominal power source, even though the possible supply range is between 12 and 48VDC /5W.

The automixer is released with a power supply adapter for the connection to the electrical mains for a continuous use.

This supply can give power up to 3 additional devices (4-mixer chain) through a daisy chain connector (20), though in this case a more powerful supply has to be used.

N.B. Using a power supply lower than 18VDC there is a reduction of the IN/OUT dynamic.

6.3 GROUND LOOP

The AM41443 is a device with a double isolation. The electronic circuitry is floating and this helps reducing the production of ground loops.

6.4 MICROPHONE LINES

Particular attention must be given to the microphone connections. It is indispensable to follow these suggestions:

- Connect the microphones respecting the sign of the signals.
- Use high quality microphone cables
- Do not install microphone lines parallel to the electrical line. Keep a minimum distance of 30 cm.
- Install microphone inputs lines far from the loudspeakers lines.
- Once the microphones have been settled in their positions, install the loudspeakers in a way that they will not light the microphones directly, to avoid any acoustic reaction (Larsen effect).
- Close the **AMB** dipswitch only on the channels connected to a microphone.

7 AUTOMIXER USES

7.1 CHURCH

In most cases the best function to be used is LAST-ON. If, on the contrary, a specific microphone must be opened while all the others are disabled, the ONE-ON function must be activated (see Appendix A.2). In this case we recommend to connect the altar microphone to input no. 1 or at least at the Master unit, activating automatically while the other microphones are closed. If a large number of microphones is installed, the installer might find useful also to limit the number of the microphones open at the same time through the LOM function.

One important feature is the NOMA: as explained in Appendix A.5, this circuit keeps a constant output level when the number of open microphones changes.

This feature is particularly useful in low reverberation ambients, but it can also happen that the high reverberation in a church causes the activation of another microphone channel when only one is already open. A higher level of the THR-MIN value can limit this effect, but the feedback is unavoidable if there are loudspeakers installed near the microphones.

With two open microphones the NOM feature decreases the output of 3dB. Since there is no one talking in the second microphone, the resulting effect is an unwanted and unpleasant decrease of the output level. To avoid this inconvenience we suggest that the NOM dip-switch in the microphone channels picking up the reverberation or even on the total number of microphone channels, if they are reachable by the reverberation, is not closed. In any case this modification does not create any problem, since most of the time is only one person speaking at a time. Even if two people talked or sang simultaneously the volume increase would certainly be acceptable.

7.2 CONFERENCE ROOMS

This installation usually requires a certain number of seats for delegates and a seat for the president. In this case the use of the LOM function can be the best solution, limiting the number of simultaneously open microphones to 2 or 3. Besides, it will be necessary to use the PRIO function to give priority of speech to the president, going over the delegates priority when needed.

7.3 VIDEOCONFERENCING

The use of an automatic mixer, together with specific devices for the control of telephone lines traffic, is a fundamental component for this kind of installations. The mixer gives all the advantages of an automatic device to obtain an ideal signal-noise ratio during transmission.

7.4 BROADCAST APPLICATIONS

In a radio or television studio the microphone management is usually a sound engineer occupation. Nevertheless, in many cases the installation requires an immediate opening of the microphones (typical feature of an automatic mixer) and the possibility to limit the maximum number of microphones open at the same time, thus limiting also the involvement of an operator. For these reasons, the AM41443 is particularly indicated for open discussions and round tables, both in live and recorded sessions.

8. TECHNICAL CHARACTERISTICS AND PERFORMANCES

8.1 LIST OF THE CONTROLS AVAILABLE FOR REMOTE CONTROL:

GENERAL MUTING

MUTING of a single channel

OVR override of a single channel

ONE-ON activate Ch1 (or a channel different from 1 if needed)

LAST-ONE the channels open at the time of the termination of the speech remain activated.

PRIO-1 activates the priority on CH1, 2, 3 or 4 on the master unit

NOM limits the output level according to the number of open microphones (maintain 0dB level)

LOM with the indication of the max number of channels open (all or from 1 to 9)

ORG this function kills the selected microphones when the assigned channel goes active

ONLY-ONE (o Filibuster) activates only one channel

ATTENUATION: attenuation level when the channel is closed (non-active)

HOLD time given to a single channel under-threshold before closing

LIMIT-GENERAL limiter activated on the master level

NOISE GATE activated below a given level

VOLUME MASTER WITH the setting of a min and max limit (for the use with control panel)

VOLUME channel #.

Auxiliary Volume for the AUX2 output (-16dB/+16dB respect to the Master level)

With the external control from a PC or from a panel the front knobs of the AM41443 can be disabled.

There are two levels for the remote controls: Installer, User (User without PW) (Installer needs a PW to gain free access to all parameters).

8.2 TECHNICAL DATA

INPUT: 4 on XLR balanced -60/-40/-20/0dBu 14Kohm

INPUT: auxiliary on RCA jack 0dBu 10Kohm

OUTPUT: 1 XLRM balanced with Master level control, on back panel
1 balanced on double RCA connector with trim level control on back panel
1 balanced on daisy link (shielded RJ45 with proprietary connection) used also for partial outputs

OUTPUT LEVEL: up to 26dBu with nominal 24VDC power supply

Connections: USB-b on front panel for the control with a PC

RS485 on daisy chain for proprietary external panel

RS232 for Crestron-AMX like external control

Controls on front panel:

Volume for the single channels

Master Volume

Volume of the auxiliary output with separate trim control

Tone control with 3 frequency bands

LED indicating the connection of a PC or an external panel

LED activation/status of the channels

VUmeter with 5 LEDs and one ON-LED

RESET pushbutton

DIP SWITCH with 5 sections to control the functions:

Automix/Manualmix
Priority Ch1 or Noise gate
Last-ON or compander
Limiter
Phantom ON 4 inputs

Controls on rear panel:

DIP SWITCH on each input channel for sensitivity selection plus HP filter
RJ45 CONNECTOR for data in the daisy chain configuration
Mini stereo-jack 3,5mm for RS232

Frequency response: 10-50 KHz (with possible reduction)

THD: <0,01%

S/N: <96dB

Box: metallic ½ rack

Dimensions: (44x210x165)

Weigh: 1140gr

The AM41443 complies with the current safety standards (EN60065, EN50081-1, EN50082-1). The device has the CE seal as required by 89/336/CEE.

24.09.07

APPENDIX: OPERATING FUNCTIONS

A.1 AMB / THR

The heart of the AM41443 is the automatic mechanism for the activation (opening) of the microphone channels. The decision for the activation happens as a function of an algorithm considering the single signals of the channels in the system.

For a number of reasons it could be necessary to exclude some of these channels from the computation of the parameters necessary for the activation of the microphones. This selection, specific for each channel, is defined AMB(ient).

The activation of a new channel is decided as a function of many parameters such the energy inside a defined spectra of frequencies, the speed of this variation and much more. A parameter that can contribute to change the sensitivity of the algorithm for the activation is called THR (threshold). This parameter can be modified in order to adapt the behavior of the automatic mixing as a function of different needs for the installation.

A.2 LAST-ON

The selection of this function leaves the last channel used open even if no one is speaking. If two or more microphones were active at the same time they will remain open if the two or more speakers stop synchronously. As soon as the next speaker starts its channel opens and the other, remained active by the effect of the LAST-ON, will be closed.

A.3 ONE-ON

This function can be used for the same purpose as the Last-ON. The difference is that the channel indicated by the selection will be activated automatically when no other channels are open. This channel can be selected by the use of the external control.

A.4 LOM - LIMIT OF THE OPEN MICROPHONES

This function limits the number of the channels activated at the same time. If more devices are connected to a system, this control is propagating along the chain. If we indicate a number N allowed to be active during the session that same number will be considered by the system (it may happen that only transitorily, in the opening phase, more than N microphones will be activated, but in a very short time the exceeding number will be silenced according to the hierarchy related to N).

Setting only one allowed channel is the equivalent of the *FILIBUSTER (or ONLY ONE)*. When a speaker is taking his speech his channel will be activated only if all the others are closed; only one channel can be activated at a time. Only when the speaker finishes his speech, another one can start.

A.5 NOMA – NUMBER OF OPEN MICROPHONES

It represents the attenuation of the output signal based on the number of the active microphones.

Not necessarily all the microphones participate to the computation of the general attenuation; it is possible to unselect some microphones through the use of external control with the PC.

This function allows a certain control on the output level, which can remain constant even if the number of open microphones increases.

The classic attenuation for not correlated signal is 3dB for each doubling of the microphones activated. This is the default value used for the AM41443.

With the external control, the procedure of this attenuation rule can be changed to any value to modify the attenuation according to the installation needs.

Number of microphones activated							
1	2	3	4	5	6	7	8
0dB	-3dB	-4.8dB	-6dB	-7dB	-7.8dB	-8.5dB	-9dB

Output attenuation, dB

In the table we indicate an example of the attenuation scale based on 3dB/doubling.

A.6 ORGAN

In some installations it may be necessary to inhibit the activation of some microphones in the presence of some acoustical situations. For example in a romanic or gothic church with the organ placed behind the altar the produced sound may activate some microphones. If it is necessary to avoid this behavior it is possible to activate the ORG function that selectively inhibits some of the microphones. With the AM41443 it is possible to select which microphone will act as a killer and the channels we need to kill.

In the AM41443 also the channels needing to be killed with the ORG function can be selected with external control. The attenuation of the microphone channels can be modified as desired. The default value is 20dB. The channel dedicated as a killer is not mixed with the others and is used only as service channel. When the organ channel is below the threshold the automatic mixer acts with the normal functions.

A7. NOISE GATE:

In the manual configuration all the channels used are normally open. When the reinforcement system is made with a number of distributed loudspeakers it could be useful to reduce the floor noise in absence of speakers. It is possible to activate a noise gate reducing the general levels when the levels are below a given threshold.

The difference in respect to the automatic mixer functions is that in manual all the microphones are closed or open at the same time and normally the noise gate threshold is lower than that used for the automatic mixing since it has to reduce only the electronic noise appearing in the absence of useful signals.


A8. LIMITER

It avoids the signal saturation. The activation threshold is controlled by PC. The default value on the devices is set to 0dBu, on balanced output.

ATTACHMENT 1

CONVENTION AND HIERARCHIES

The convention defining the chained devices is shown as follows:

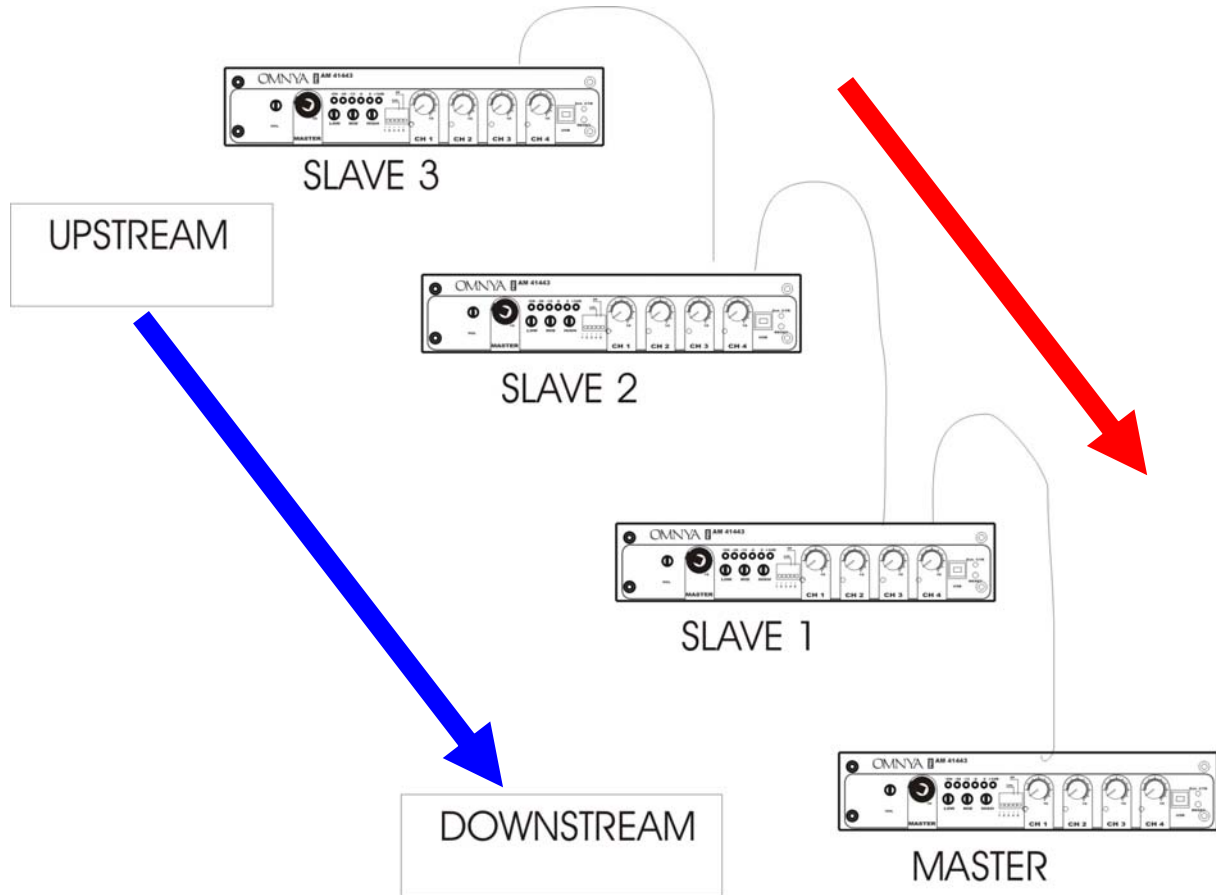

- **VU-METER DISPLAY** The local VU-METER of all the devices indicates the level of the signal audio sum of all the devices upstream + its own audio signals. For example: Slave #3 VU-METER indicates the sum of SLAVE #1 + #2 + #3 audio signals. The Master unit sums up all the chain audio signals.
- **MICROPHONE HIERARCHIES** follow the opposite direction, upstream. The Master microphones will be called mic #1 #2 #3 #4. SLAVE #4 microphones: mic #5 #6 #7 #8 etc

NOTES :